

FIG. 1

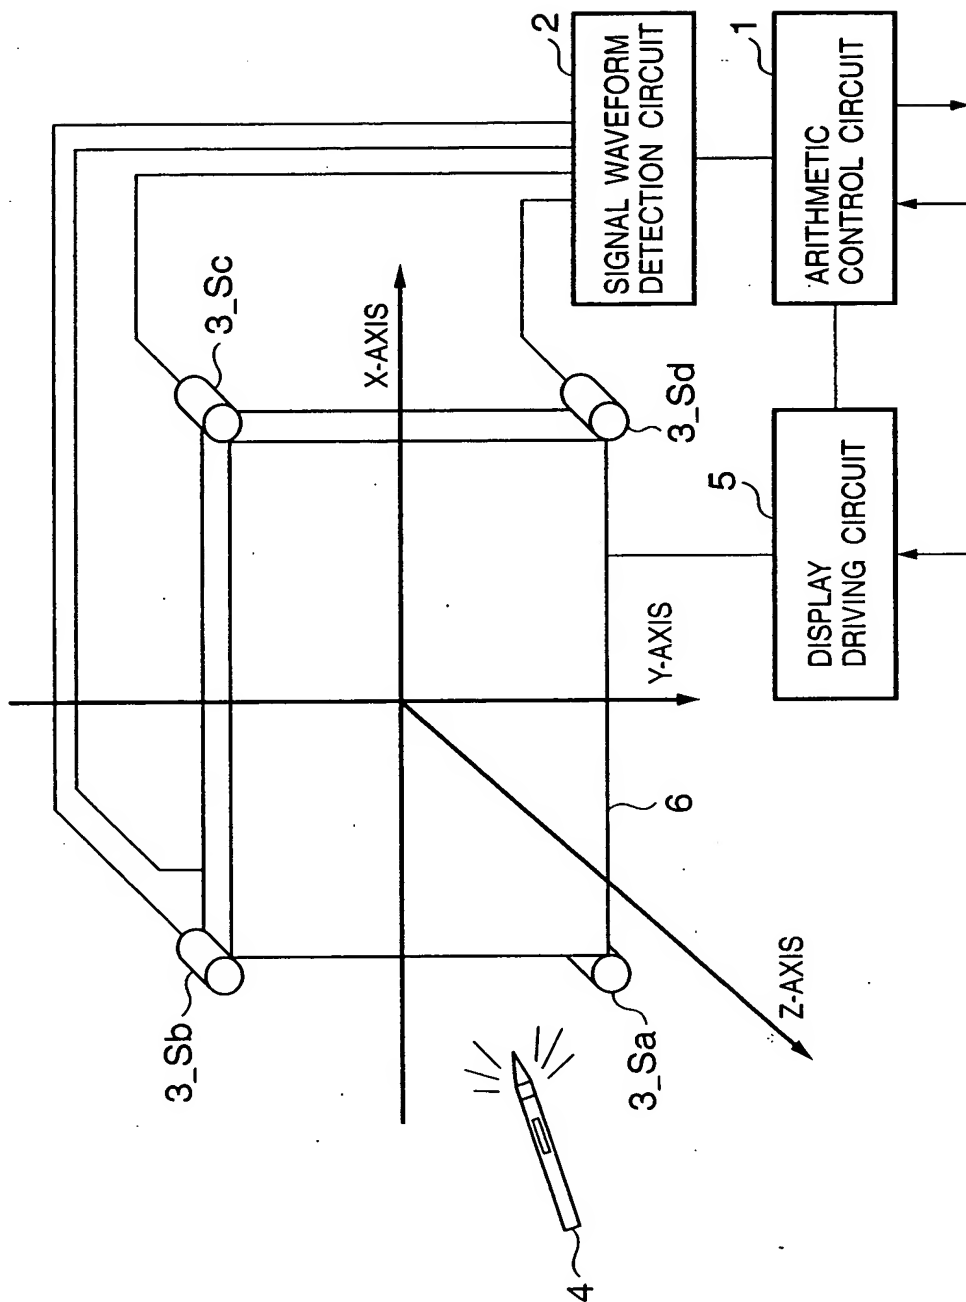


FIG. 2


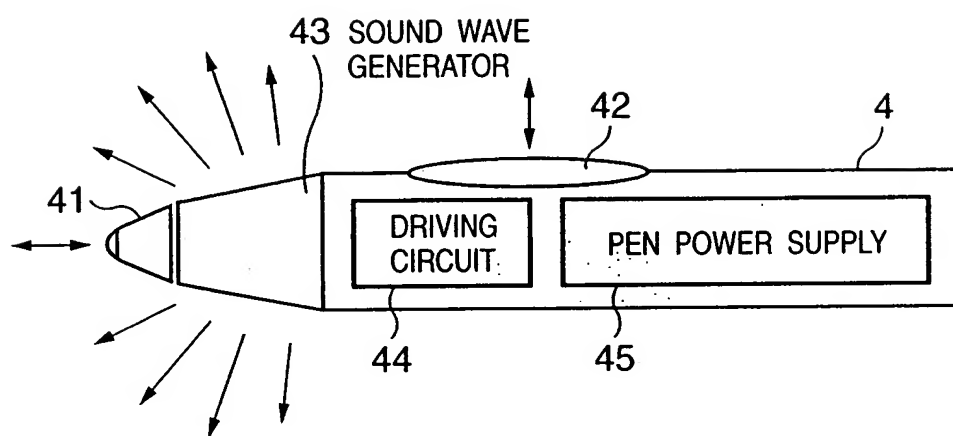


FIG. 3

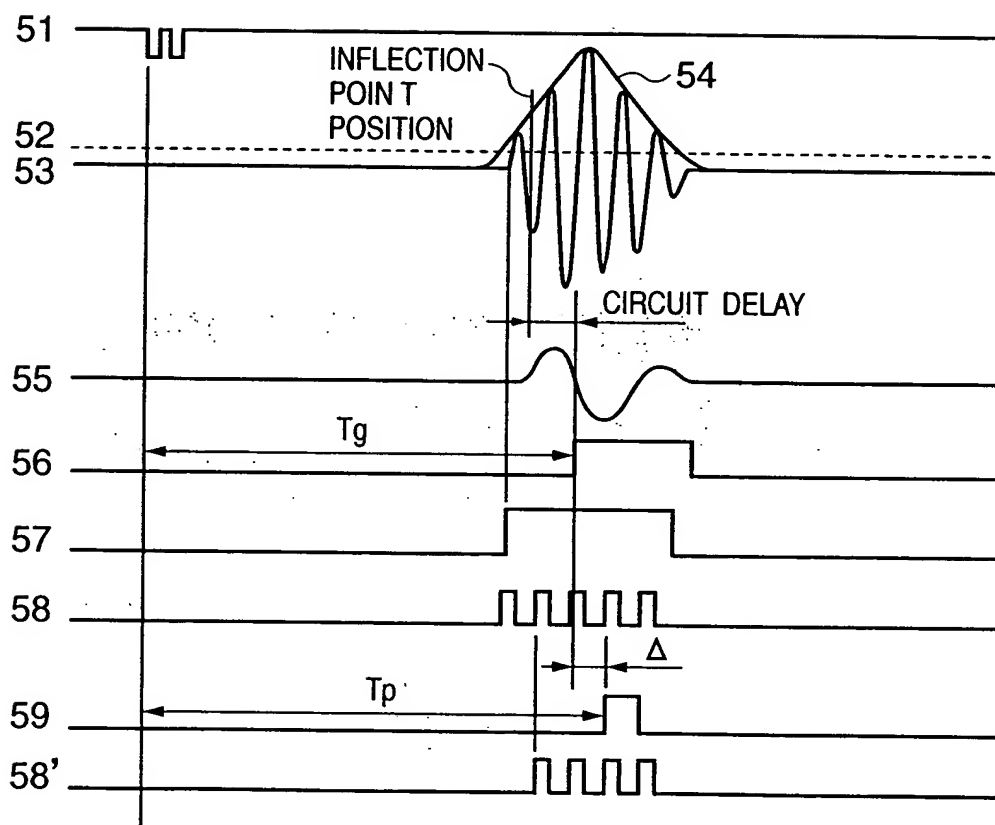

10066620-020602

FIG. 4

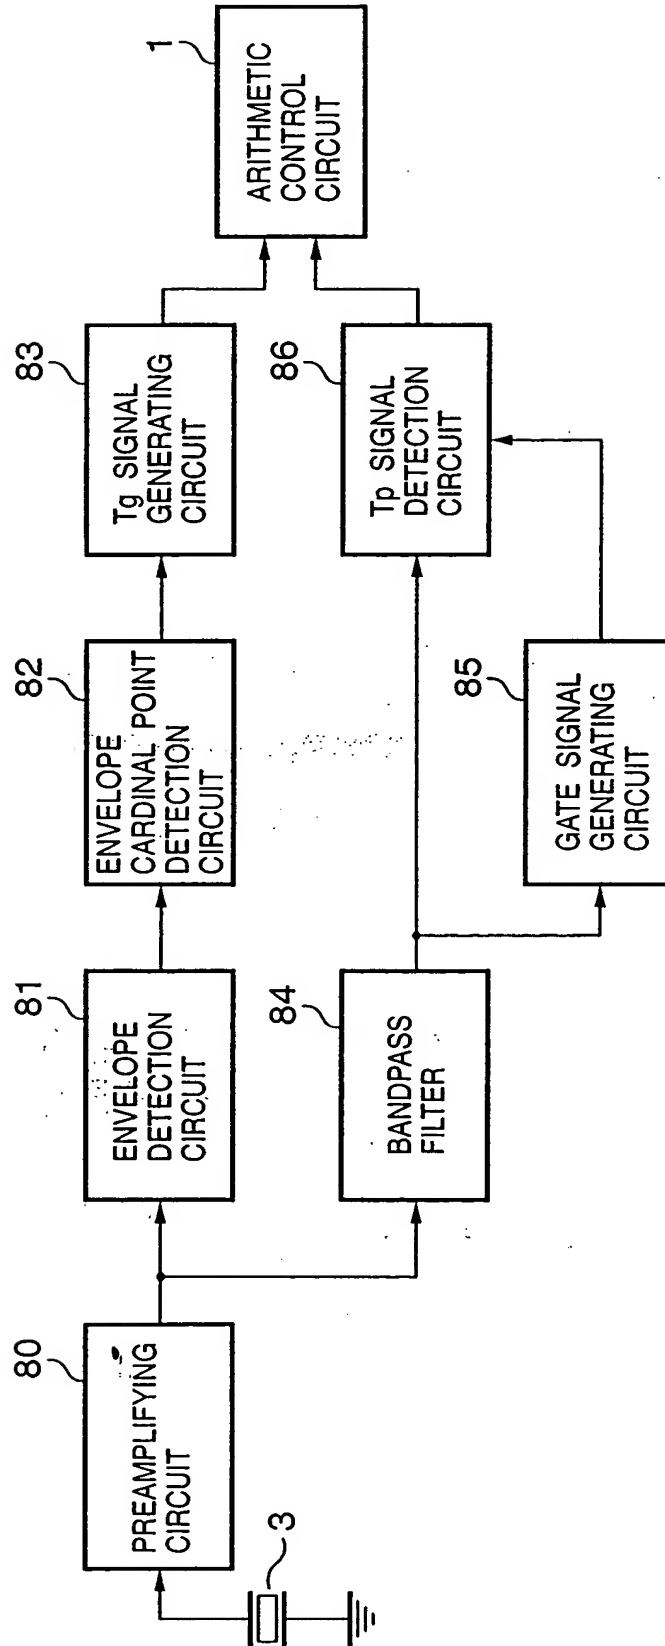


FIG. 5


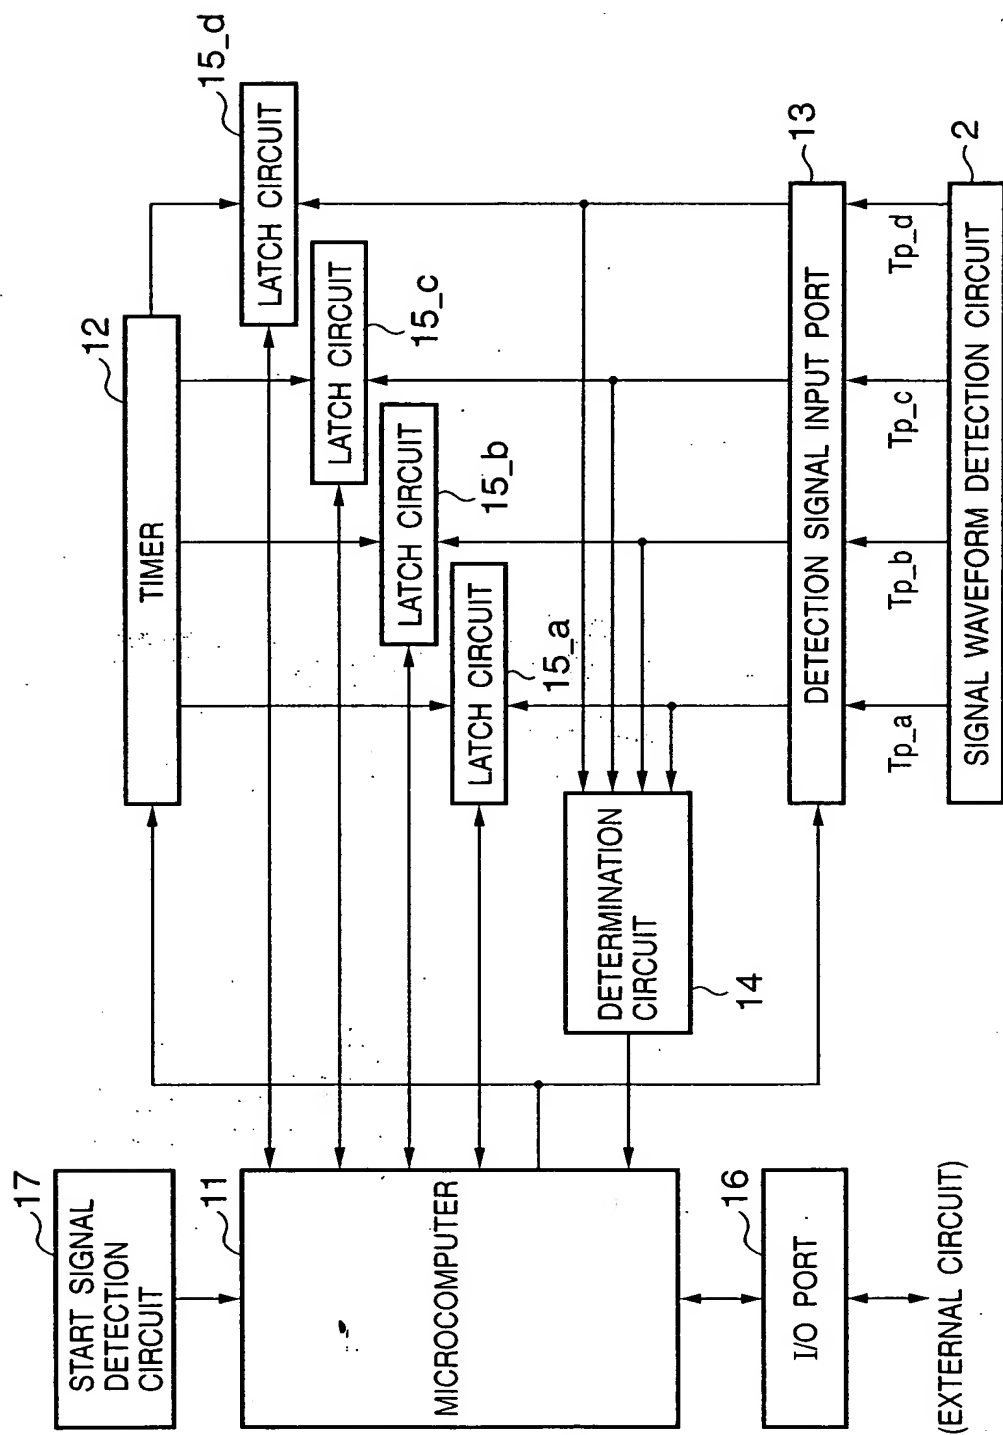


FIG. 6

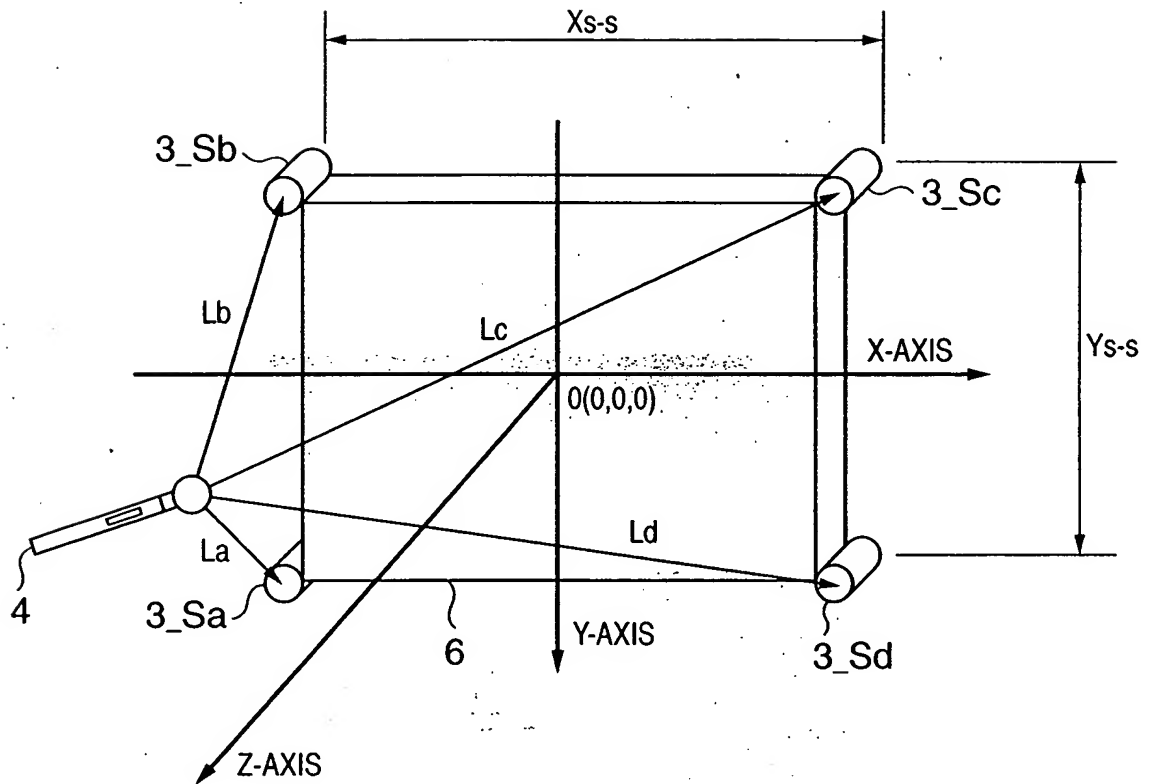

209020.02999001

FIG. 7


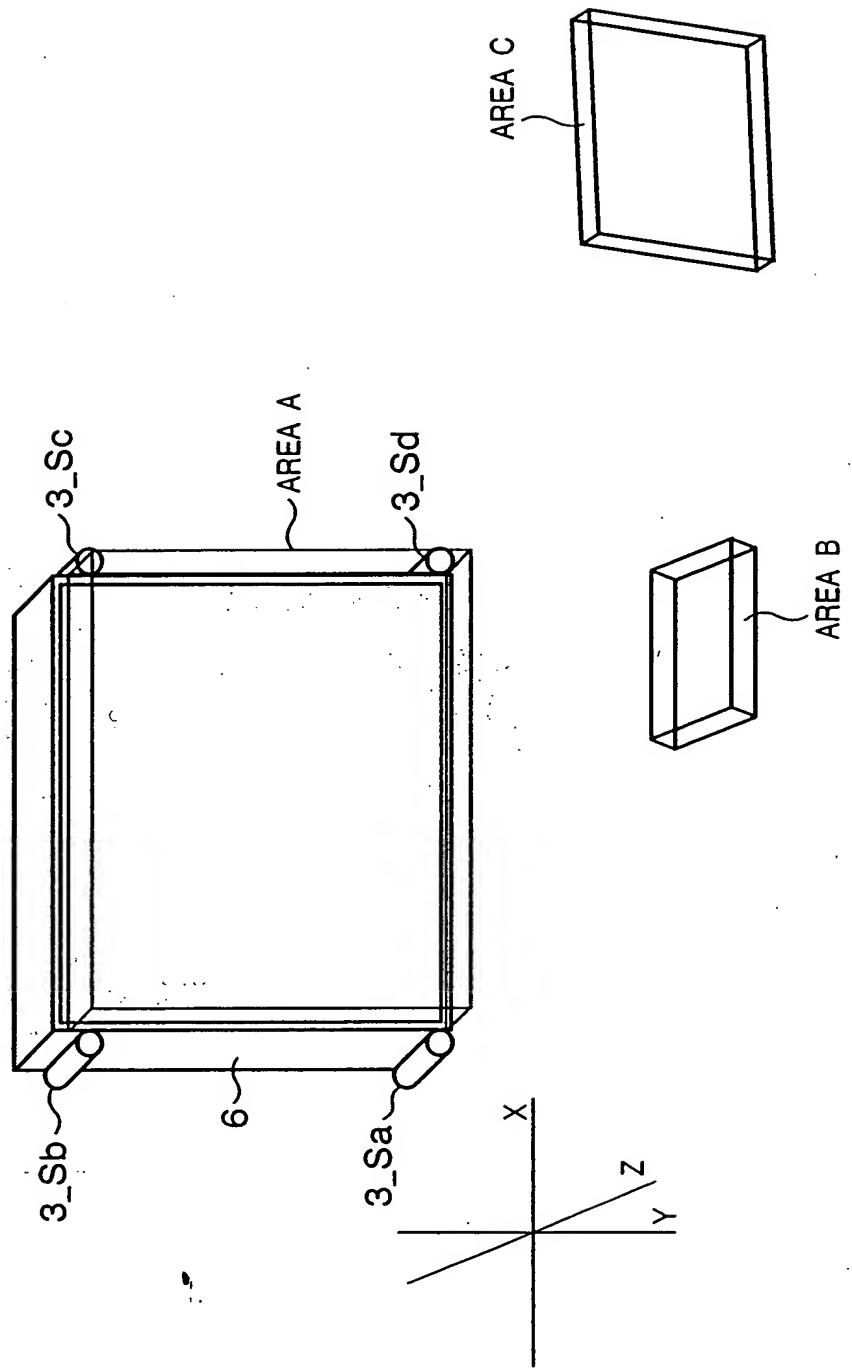



FIG. 8

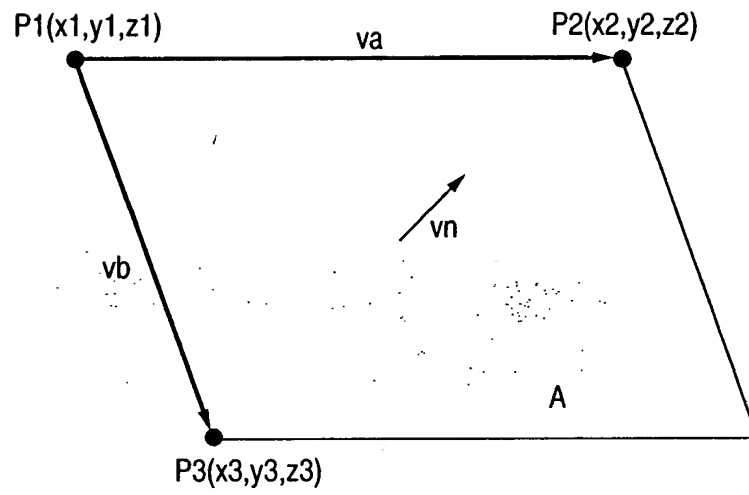

10066620-0299900T




FIG. 9

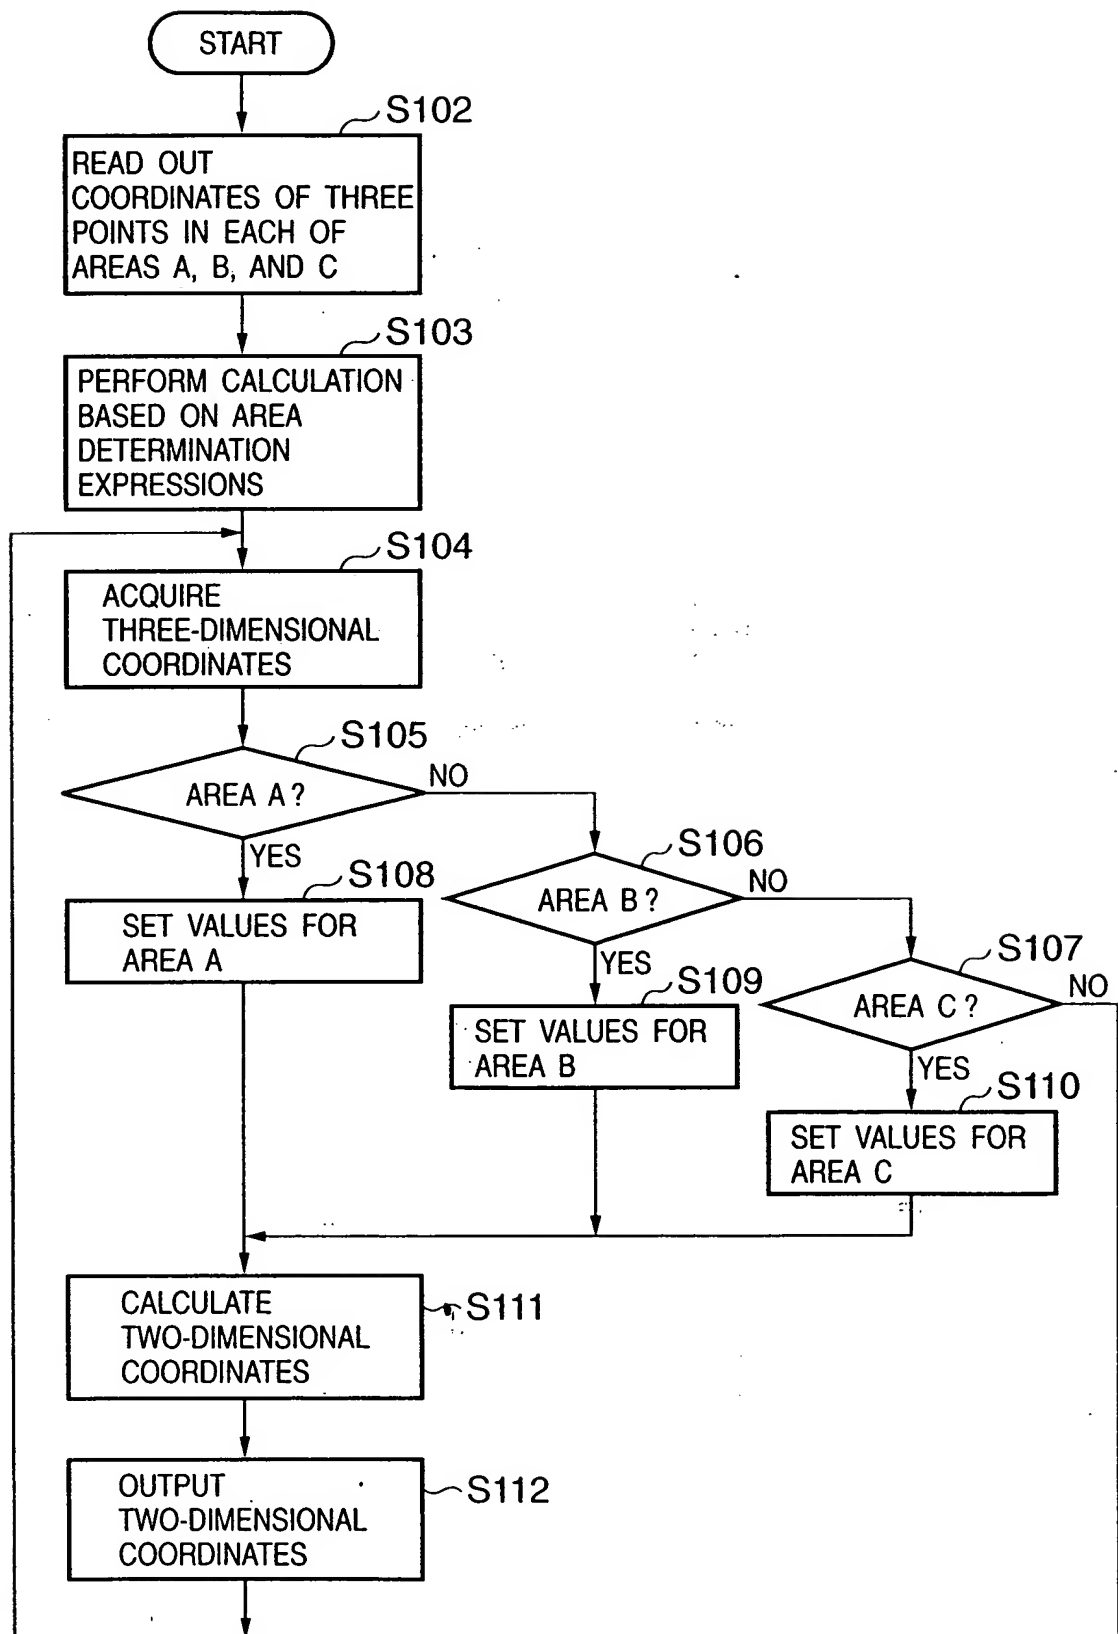


209020-0299900T

FIG. 10

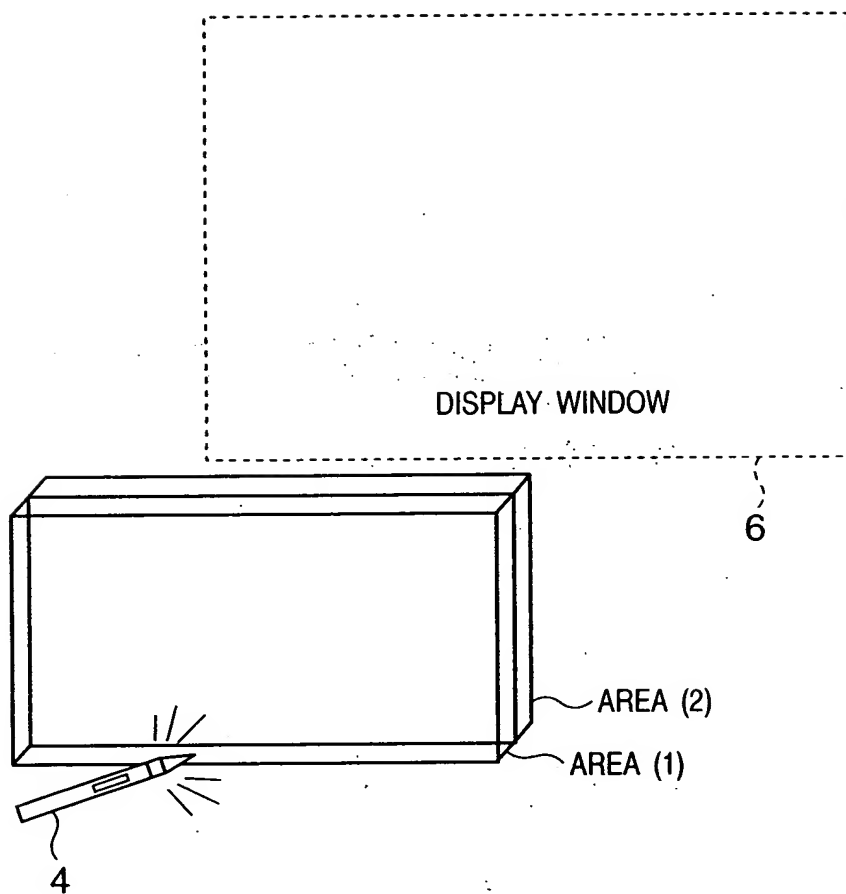


209020-02999001

FIG. 11

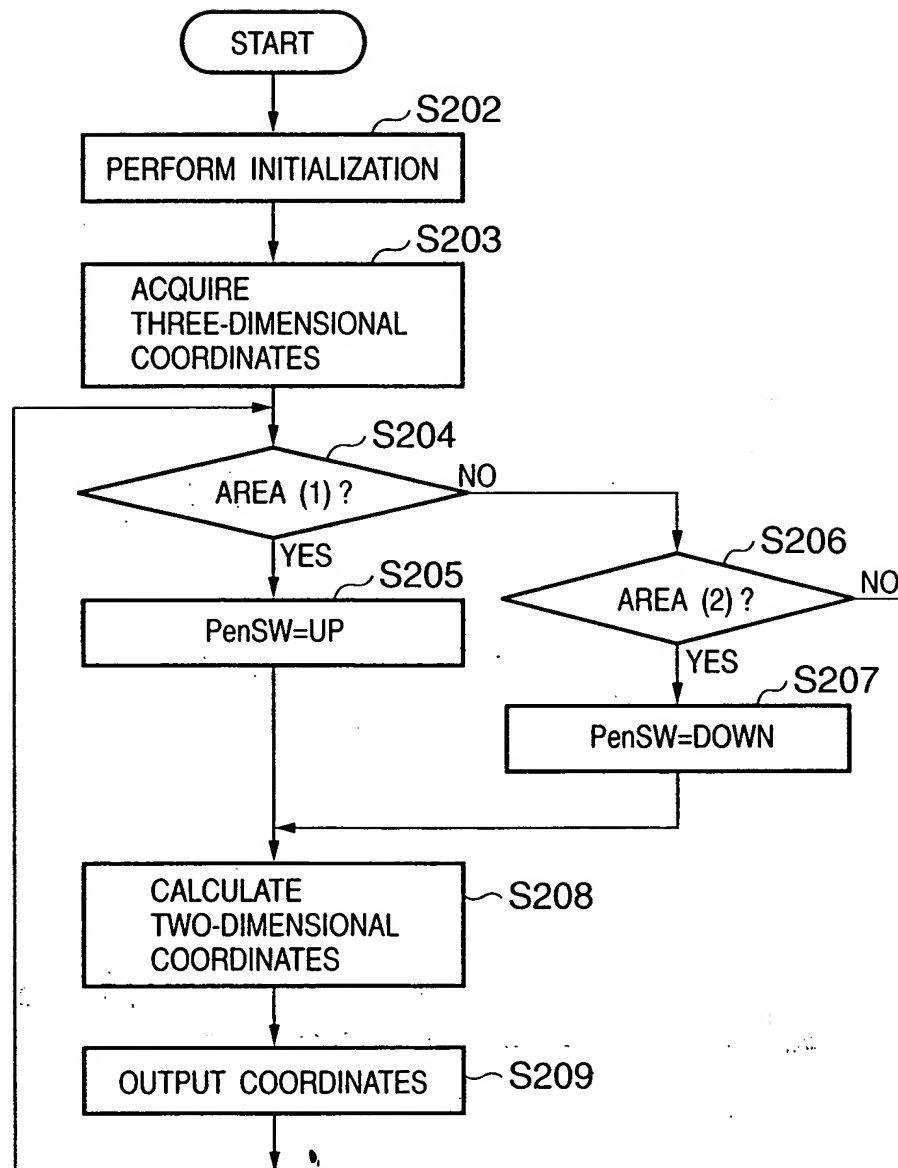

209020-0299900F

FIG. 12

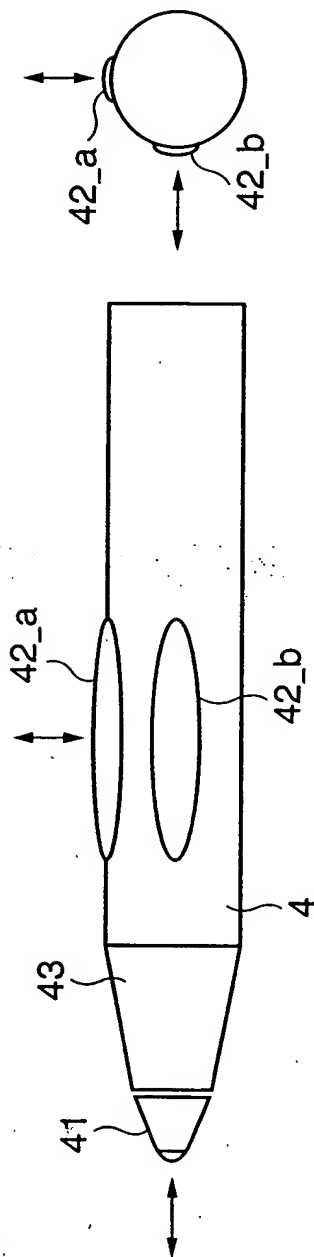

209020-02999001

FIG. 13

| AREA   | PEN TIP SWITCH 41 | PEN SIDE SWITCH 42_a | PEN SIDE SWITCH 42_b | PEN DOWN SIGNAL |
|--------|-------------------|----------------------|----------------------|-----------------|
| AREA A | LEFT              | LEFT                 | RIGHT                | PEN TIP SW      |
| AREA B | DOUBLE CLICK      | RIGHT                | LEFT                 | SIDE SW1        |
| AREA C | LEFT              | LEFT                 | RIGHT                | DOWN            |